


Adapter Harness Notes for : 2-2IN-JMP

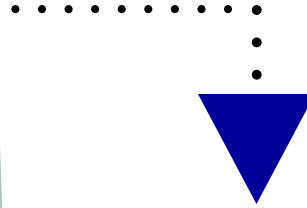

Installations Notes:

The 2-2IN-JMP harness adapter, pictured at left, is used to extend the input harness of the tanning unit for some applications. The connector has (2) male pins with a locking tab to mate with the bed harness and (2) female receptacles on the opposite end to plug onto the FA100 replacement ballast. Note that the input and output connectors are on opposite ends of the FA100. For this reason, this adapter harness gives a bit more “reach” to allow easier connections from the bed harness to the location of the input connector on the replacement FA100. Pictured below, the adapter harness brings the input power closer to the original location of the old ballast connection.

Typical Applications:

Usually 10-pin ballasts such as ETS, ESB, Sigmatron, Applied Digital

