


Replacement Notes for : Sigmatron, 10-pin

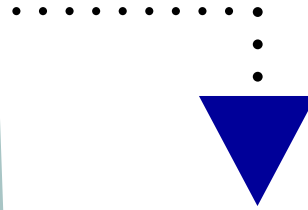


Installations Notes:

10-pin Sigmatron ballast, pictured at left, is replaced by the FA100 ballast using the existing input harness from the tanning unit. The existing 8-pin output harness from the tanning unit plugs directly into the FA100 output connector. Note that the input and output connectors are on opposite ends of the FA100. Verify input voltage to the old ballast and move both input voltage selectors on the FA100 as required.

Typical Applications:

ESB

These ballasts were typically labeled with P206B.

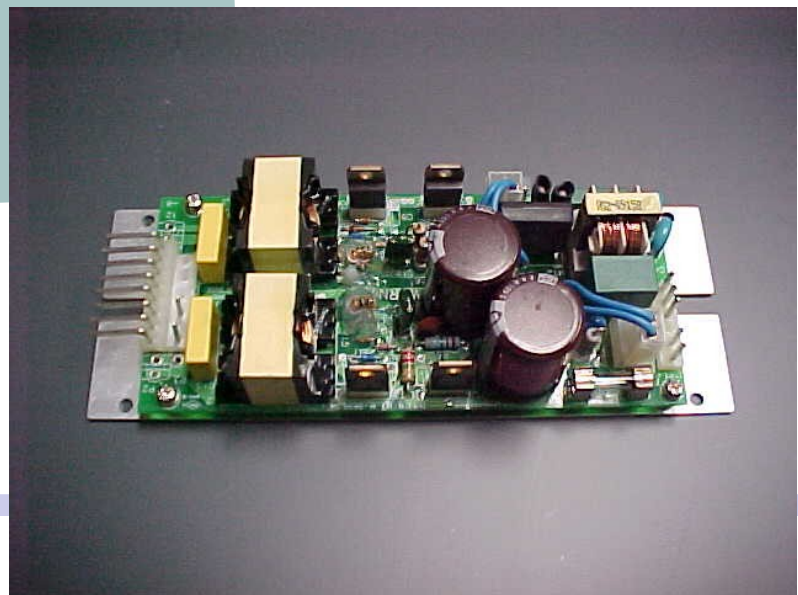

FOR TECHNICAL SUPPORT CALL (978) 249-6474



